# Advantix bathroom drain Instructions for Use



**Model** 4936.2

**Year built:** from 01/2008



Advantix bathroom drain 2 from 25



# Table of contents

1	About	these instructions for use	4
	1.1	Target groups	4
	1.2	Labelling of notes	
	1.3	About this translated version	
2	Produ	act information	6
	2.1	Standards and regulations	6
	2.2	Intended use	6
	2.2.1	Areas of use	6
	2.2.2	Media	7
	2.2.3	Drainage capacity	7
	2.3	Product description	8
	2.3.1	Overview	8
	2.3.2	Technical data	9
	2.3.3	Operating mode	9
	2.4	Information for use	9
	2.4.1	Installation variations	9
	2.4.2	Sealing	10
	2.4.3	Fire protection	14
	2.5	Required accessories	14
3	Handl	ling	16
	3.1	Assembly information	16
	3.1.1	Important note	16
	3.1.2	Installation dimensions	17
	3.1.3	Tools and materials	17
	3.2	Assembly	
	3.2.1	Connecting the drain	17
	3.2.2	Preparing for subsequent work	19
	3.2.3	Sealing the drain	20
	3.2.4	Mounting the top	23
	3.3	Care	24
	3.3.1	Care tips	24
	3.3.2	Cleaning the drain	24
	3.4	Disposal	25

Advantix bathroom drain 3 from 25



# 1 About these instructions for use

Trade mark rights exist for this document; for further information, go to *viega.com/legal*.

# 1.1 Target groups

The information in this instruction manual is directed at the following groups of people:

- Heating and sanitary professionals and trained personnel
- Tilers
- Consumers

Individuals without the abovementioned training or qualification are not permitted to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

# 1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



#### DANGER!

This symbol warns of possible life-threatening injury.



#### WARNING!

This symbol warns of possible serious injury.



### CAUTION!

This symbol warns of possible injury.



#### NOTICE!

This symbol warns of possible damage to property.



This symbol gives additional information and hints.

Advantix bathroom drain 4 from 25



# 1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e. g. EN) and/or in Germany (e. g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/ Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

Advantix bathroom drain 5 from 25



# 2 Product information

# 2.1 Standards and regulations

The following standards and regulations apply to Germany / Europe and are provided as a support feature.

#### Regulations from section: Sealing

Scope / Notice	Regulations applicable in Germany
Stress class of the underground, as well as suitable bonded sealing	ZDB-Merkblatt 8/2012
Stress class of the underground, as well as suitable bonded sealing	Leitfaden zur Abdichtung im Verbund (AIV)
Approved bonded sealings with proof of practicability in keeping with building law for stress classes A and AO	ETAG 022 T1
Approved bonded sealings with proof of practicability in keeping with building law for stress classes A, B and C	DIBt-Bauregelliste A, Teil 2 des DIBt und Prüfgrundsätze für Abdichtungen im Verbund (PG AIV-F)
Permitted bonded sealings	EN 14891

## Regulations from section: Fields of application

Scope / Notice	Regulations applicable in Germany
Specifications not met due to water seal level and small drainage capacity.	EN 1253-1

## Regulations from section: Media

Scope / Notice	Regulations applicable in Germany
Typical domestic wastewater	DIN 1986-3

## 2.2 Intended use

## 2.2.1 Areas of use

The drain is designed for small to medium volumes of water, which occur in e.g. residential building.

Advantix bathroom drain 6 from 25



Technical information, see ♥ Chapter 2.3.2 "Technical data" on page 9.

The drain with a horizontal drain socket is suitable for both mounting in a floor opening as well as for mounting on the floor.

The side inlet not serves as an odour trap.



The water seal level of 30 mm and the small drainage capacity do not meet the specifications pursuant to the standards and regulations. See  $\mbox{\ensuremath{,}}\ \mbox{\ensuremath{,}}\ \mbox{\ensuremath{,$ 

Check if the drainage capacity is sufficient before mounting!


#### 2.2.2 Media

The drain is intended for draining of household-type wastewater in constant operation, see \$ "Regulations from section: Media" on page 6.

- The short-term temperature of the wastewater may reach up to 95° C. The temperature must be considerably lower in constant operation.
- The pH value must be higher than 4 but lower than 10.

It is not permitted to introduce wastewater which would damage the product material.

## 2.2.3 Drainage capacity

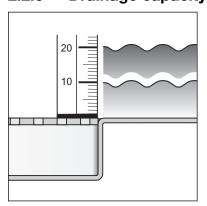

Drainage capacity at an accumulation height of 10 mm above the grate: 0.33 l/s

Drainage capacity at an accumulation height of 20 mm above the grate: 0.4 l/s

Drainage capacity through the lateral inlet: 1.2 l/s


The values are dependent on the total height of the drain unit.

Advantix bathroom drain 7 from 25



# 2.3 Product description

# 2.3.1 Overview

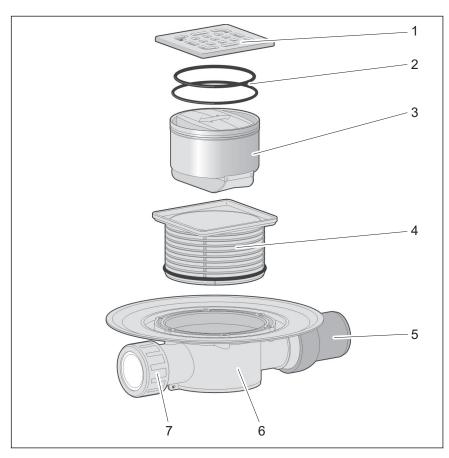

- 1 Grate
- 2 sealing rings
- 3 removable odour trap
- 4 top, can be cut to length
- 5 horizontal drain socket (DN 50) with ball joint
- 6 Base unit
- 7 inlet (DN 40) for the connection of additional drain pipes ( e.g. from washbasin, shower, etc.)

There are various articles available under this model number, which differ by the version of the top supplied.

frame	Article No.
Frame made of plastic:	583 217
Frame made of stainless steel:	583 248

Advantix bathroom drain 8 from 25



#### 2.3.2 Technical data

Nominal width [DN] (drain socket)	50
Nominal width [DN] (inlet)	40
Drainage capacity	Chapter 2.2.3 "Drainage capacity" on page 7
Dimensions and installation height	Chapter 3.1.2 "Installation dimensions" on page 17
Water seal level	30 mm
Load class	K = 300 kg

# 2.3.3 Operating mode Odour trap

In most drains, the ingression of sewer gases into rooms with drains is prevented by an odour trap with a water seal. If the drain has not been used for a long time, the water seal can evaporate and this may lead to odour nuisance.

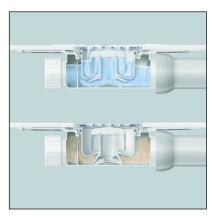


Fig. 1: Mode of operation of the odour trap

The odour proof odour trap prevents the ingression of sewer gases, even after the water seal has evaporated. The odour proof odour trap is equipped with two shutter valves, as can be seen in the lower part of the graphic. If the water seal has evaporated, the shutter valves close and hold the sewer gases back in the drain.

#### 2.4 Information for use

## 2.4.1 Installation variations

Installing in a bare concrete floor

The mounting of the drain in a bare concrete floor is as follows:

Advantix bathroom drain 9 from 25



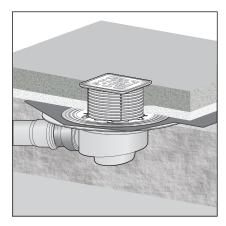


Fig. 2: General installation example – Floor recess

The drain is placed in a floor recess and then cast-in.

#### Mounting on a floor

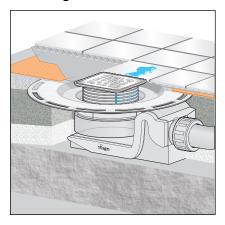


Fig. 3: General mounting example – Mounting on the floor

During the mounting on the floor, the drain is integrated into the floor construction. At the same time, it can e.g. be integrated into the levelling screed or heat insulation. If necessary, a vertical drainpipe can be led through a drill hole in the floor at the same time.



#### NOTICE

The creation of a floor recess must be agreed with the following people:

- a structural engineer
- the on-site fire protection inspector or the specialist engineer for fire protection

If necessary, proof of compliance with building code or an expert's report must exist.

# 2.4.2 Sealing

The drain can be sealed both conventionally as well as with bonded sealing.

Advantix bathroom drain 10 from 25



#### Conventional sealing

The flange of the drain is intended for conventional sealing. To be able to seal the drain conventionally, you require a suitable sealing collar and a clamping ring with which the cuff is secured  $\mathsepsilon$  Chapter 2.5 "Required accessories" on page 14.



Fig. 4: Construction diagram of a conventional sealing



#### NOTICE! Not suitable for floor-level showers

Conventional sealing is not recommended with floor-level showers, because dampness can enter the screed and damp proof layer.

The bonded sealing should be used in the case of floor-level showers.

#### **Principle**

Traditionally, sealing is made using bitumen or EPDM sealing collars. The sealing collars are laid directly onto the raw concrete or heat insulation. This process has proved itself to be particularly effective for sealing balconies, patios, floor installation panels and cellar floors. In addition, sealing collars are often used as an additional second sealing layer below the bonded seal.

The following components are required for the installation of a drain with conventional sealing:

- drain
- Clamping ring with sealing collar for EPDM and bitumen sealing lanes

#### Information for processing

The sealing collar is coated with EPDM on the one side and with bitumen on the other side

Place the sealing collar on the drain and fasten it with the flange. It depends on the sealing collar used which material layer of the sealing collar is placed facing up. You can find more information in the mounting instructions of the sealing flange.

Advantix bathroom drain 11 from 25



#### **Bonded sealing**

To protect against moisture penetration, apply sealing foils, which are to be processed in liquid state, directly below the tiles on screed and walls. The determination of the stress class and the underground as well as the selection of the suitable bonded sealing must be carried out in compliance with the valid standards and regulations, see: \$ "Regulations from section: Sealing" on page 6.

Bonded sealing can be carried out with the help of a suitable stacking element. You have the possibility to double seal, using conventional and bonded sealing or only using bonded sealing.

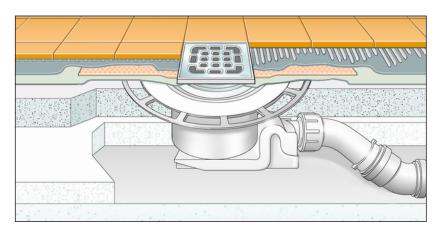


Fig. 5: Diagram of a bonded seal

Advantix bathroom drain 12 from 25



#### Important note

Careful planning is required for professional sealing. In addition, depending on the individual dampness wear class and the type of foundation, a suitable thin bed bonded sealing with a building regulations certificate of suitability must be chosen.

Furthermore, the following factors should be taken into account:

- Drain or shower channel must be equipped with a special flange, which has an adhesive surface and a width of at least 30 mm.
- For bridging the material change from drain to screed, either a suitable sealing collar or sealing tape designed for overlapping with the thin bed bonded sealing over a width of at least 50 mm must be used.
- The screed must be laid at a minimum incline of 1–2%.
- The installation must be carried out properly in acc. with the mounting instructions and the manufacturer's information.

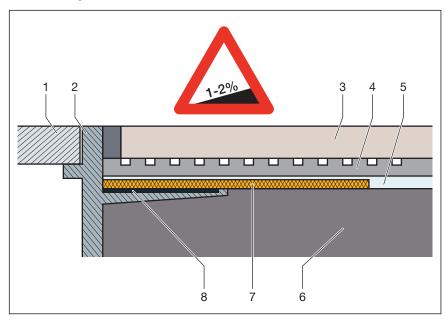


Fig. 6: Construction diagram of the bonded seal - min. screed incline 1–2 %

- 1 Grate
- 2 Top piece with adhesive flange
- 3 Tile
- 4 Tile cement
- 5 Bonded sealing
- 6 Screed
- 7 sealing collar
- 8 adhesive

#### Permitted bonded seals

In connection with suitable drains, only approved bonded sealings with proof of practicability in keeping with building law may be used. See \$\oint\_{n}\$ Regulations from section: Sealing" on page 6.

Information regarding the procedure can be found in the instructions for use of the corresponding product.

Advantix bathroom drain 13 from 25



# 2.4.3 Fire protection

Advantix shower channels and drains can both be fitted to be fire proof. The R120 pipe lead-in can be used for this purpose in the floor construction. In this way, a fire resistance time of up to 120 minutes can be achieved.


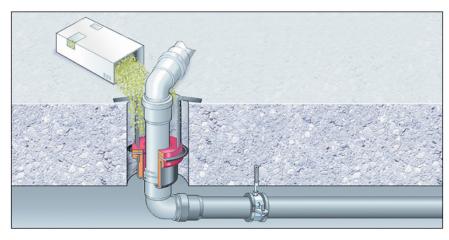


Fig. 7: Example: fire protection pipe lead-in

Mounting instruction of the R120 pipe lead-in see model 4923.5, Art.-No. 491 673.

# 2.5 Required accessories

## Top

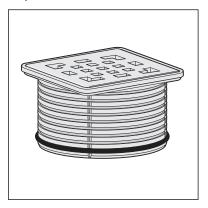


Advantix tops are available in a number of sizes and variations. You can also only buy an Advantix top frame and then purchase a suitable designer grate separately (see catalogue).

Advantix bathroom drain 14 from 25




#### Accessories for the conventional sealing

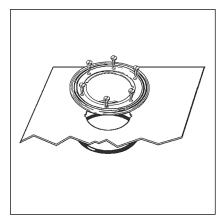

If a conventional sealing is to be made, a suitable sealing collar and a clamping ring will be required.

You will find a corresponding set in the catalogue (model 4948.31).

#### Accessories for the bonded sealing

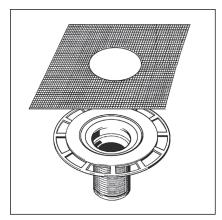

If a bonded sealing is to be applied, a suitable stacking element with sealing collar is required.

You will find a corresponding set in the catalogue (model 4925).

#### **Odour barrier**



Advantix drains can be equipped with an additional odour barrier, which also closes the drain odour-tight, if the water seal in the odour trap has evaporated. Odour nuisance is even avoided with drains that are only seldom used. Odour barriers can be found in the catalogue.

Advantix bathroom drain 15 from 25



# 3 Handling

# 3.1 Assembly information

### 3.1.1 Important note

#### Before assembly:

- Check if the drainage capacity of the drain is sufficient for the arising water volume ♦ Chapter 2.2.3 "Drainage capacity" on page 7.
- Check if the installation height of the drain corresponds with the planned floor construction.
- Ensure that the required connection line is installed with the necessary incline to the planned installation location.
- If necessary, supply the required accessories ♥ Chapter 2.5 "Required accessories" on page 14.

#### During assembly:

- Observe installation dimensions.
- Decide whether or not a backflow seal is required in the insertion part of the top.

#### After assembly:

■ The drain flange must be fully lined with mortar.

Advantix bathroom drain 16 from 25



# 3.1.2 Installation dimensions

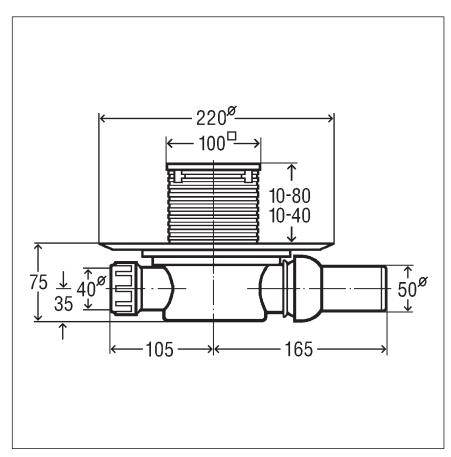


Fig. 8: Dimensional drawing for model 4936.2

#### 3.1.3 Tools and materials

#### **Required material**

- if necessary, sealing collar, clamping ring, fitting screws
- Top with grate, if not included in scope of delivery ♥ Chapter 2.3.1 "Overview" on page 8
- if necessary, stacking element for bonded sealing model 4925
- Material for securing the drain

# 3.2 Assembly

# 3.2.1 Connecting the drain

#### Connecting to the wastewater system


The connection to the wastewater system must be completed before the drain can be installed in the floor construction. Proceed as follows:

Advantix bathroom drain 17 from 25



#### Requirements:

- A pipe to the planned drainage position is already in place for the connection to the wastewater system.
- The drainpipe has an internal sealing lip.
- Align drain socket on the ball joint.
- Push the drain socket into the drainpipe completely.

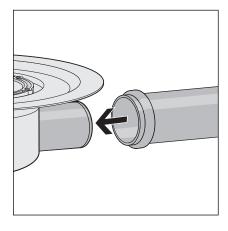


## **Connecting the inlet**


The connection to the inlet must first be made to be able to mount the drain. Proceed as follows:

#### Requirements:

- Inlet pipe has been mounted.
- Unscrew the union nut from the drain inlet.

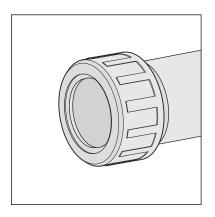


- Remove protective plug.Remove sliding ring and
  - Remove sliding ring and sealing from the protective plug.

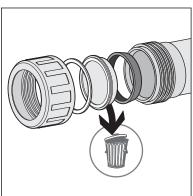

Advantix bathroom drain 18 from 25



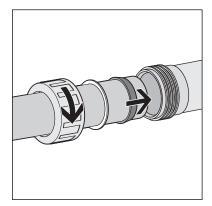


- Push the union nut, sliding ring and sealing onto the inlet pipe.
- Push inlet pipe at least 1.5 cm deep into the drain inlet.
- Screw the inlet pipe with the coupling onto the drain inlet.


# 3.2.2 Preparing for subsequent work

A few points must be observed to integrate the drain into the floor construction properly. For this reason, proceed as follows to prepare the drain for subsequent work:

#### Requirements:


- The drain is connected.
- Position the drain at the desired height at the place of use. It is important that the upper edge of the drain flange is flush with the upper edge of the sealing layer. If necessary, raise or lower the drain in the existing floor using suitable material.
- Align drain horizontally using a spirit level.

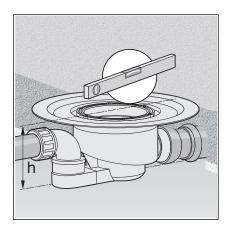

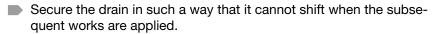


The fixing eyelets, which are to be found on the underside of the drain, can be used for fixing.

Most importantly, it must be ensured that the drain does not float when the concrete or screed is poured in.

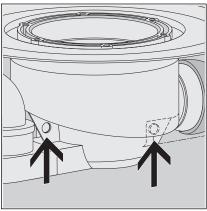

Advantix bathroom drain 19 from 25



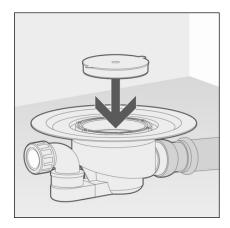

Insert yellow protective plug.



#### NOTICE!

#### Product damage due to improper installation

If hollow spaces occur during the lining of the drain, leaks may occur when pressure is applied.

Inform the subsequent workers that the drain must be fully lined and that there must be no hollow spaces.

# 3.2.3 Sealing the drain



#### NOTICE!

#### Product damage due to improper installation

If hollow spaces occur during the lining of the drain, leaks may occur when pressure is applied.

Check the proper completion of the subsequent work.



Screed and floor tiles must be laid at an incline of 1–2 % in the direction of the drain.


#### **Conventional sealing**

#### Requirements:

- A suitable sealing collar and a clamping ring are available.
- The flange is free of heavy soil.
- The complete surface of the flange is lined with material and undamaged.
- If required, clean the flange of coarse soil (e. g. from screed).


Advantix bathroom drain 20 from 25



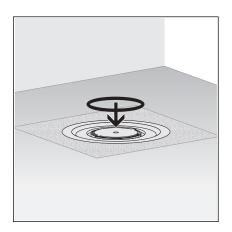

Insert sealing ring.

The sealing ring must lie in the groove between the flange and the screw holes.

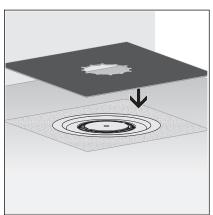


INFO! The Viega sealing collar has two differently coated sides. One side is coated with bitumen and the other side with EPDM. If the additional sealing takes place with bitumen sealing lanes, the sealing collar must be used with the bitumen side facing upwards. If EPDM sealing lanes are used, the EPDM side must face upwards.

Position the sealing collar on the drain.

The screw holes must be visible through the recesses.



Position the sealing flange on the sealing collar in such a way that the screw holes are visible.

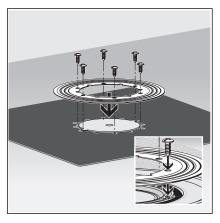

Screw the sealing flange together tightly with the drain.

The fixing screws of the clamping ring may only be screwed into the screw holes of the drain.

⇒ The drain is sealed and the remaining sealing collars can be laid.


Advantix bathroom drain 21 from 25



## **Bonded sealing**



- The flange is free of heavy soil.
- The complete surface of the flange is lined with material and undamaged.
- Remove protective foil.

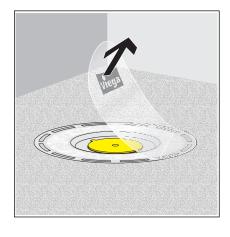


Apply the bonded sealing on the dry screed and spread to the inner edge of the flange fleece.

**NOTICE!** Observe the bonded sealing manufacturer's instructions for use.




Lay the sealing collar into the bonded sealing.

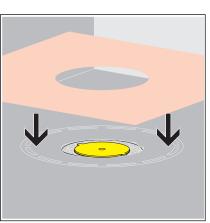


Advantix bathroom drain 22 from 25



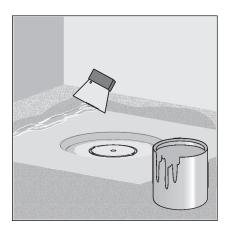


Apply a second layer of bonded sealing onto the sealing collar and, if necessary, onto the floor.

## 3.2.4 Mounting the top

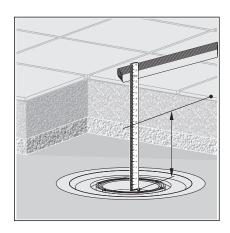

The top with the grate must still be mounted to finish off the mounting of the drain. Proceed as follows:

Calculate the height of the floor construction from the edge in the inside of the drain up to the upper edge of the tiles.

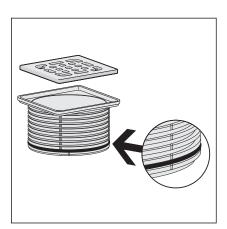


- Starting with the upper edge, transfer the measured height onto the top.
- Cut the top to the marked height.
- If necessary, insert backflow seal in the lowest notch of the top.

INFO! The backflow seal be must employed when no dampness is supposed to flow into the drain from outside of the top but water may seep in from below. Normally, no backflow seal is mounted so that water that occurs around the frame (e. g. due to a leaky silicone joint) can flow away. A backflow seal is mounted in the following cases:

- In the case of the risk of a build-up of water that can soak through the screed.
- During the mounting of a stacking element for the bonded sealing (see instructions for use of the stacking element).

Advantix bathroom drain 23 from 25



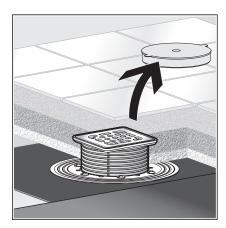

Remove yellow protective plug.

- Place the top into the drain and align according to the tiles.
- Work the top into the screed or the floor covering.


## **3.3** Care

# 3.3.1 Care tips


Normal soap or a mild cleaning agent can be used for regular maintenance and prevention of lime scale on the grate and frame. Use no scouring agent or abrasive objects.

Strong stains, even around the drain unit and the siphon, can be removed using typical household cleaner. Rinse the detergent very thoroughly with clear water after the prescribed dwell time. There should be no residue on the components.

# 3.3.2 Cleaning the drain

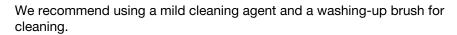


Remove and clean grate.

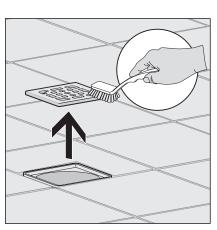


Advantix bathroom drain 24 from 25



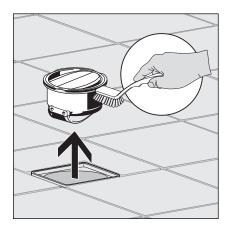

Remove and clean odour trap.

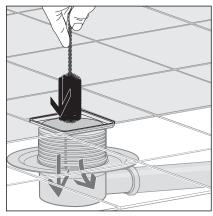

Clean drain.

- Replace odour trap.
- Re-insert grate.

# 3.4 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.

Advantix bathroom drain 25 from 25